


# DSE4510/20

## AUTO START AND AUTO MAINS FAILURE CONTROL MODULES

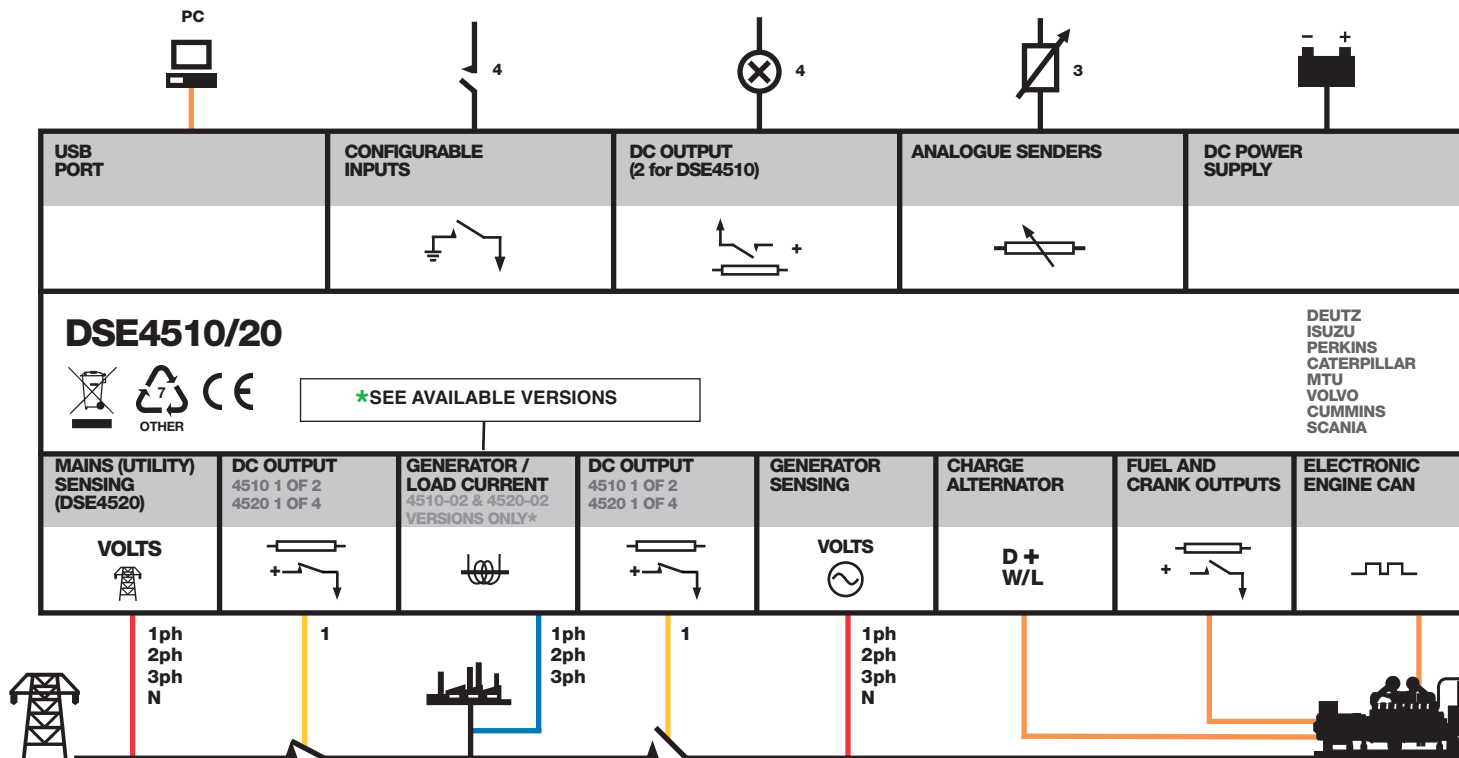

### \*AVAILABLE VERSIONS

- 4510-01 Auto Start
- 4510-02 Auto Start with current measurement
- 4520-01 Auto Mains Failure
- 4520-02 Auto Mains Failure with current measurement