


DSE7510

AUTO START & LOAD SHARE CONTROL MODULE

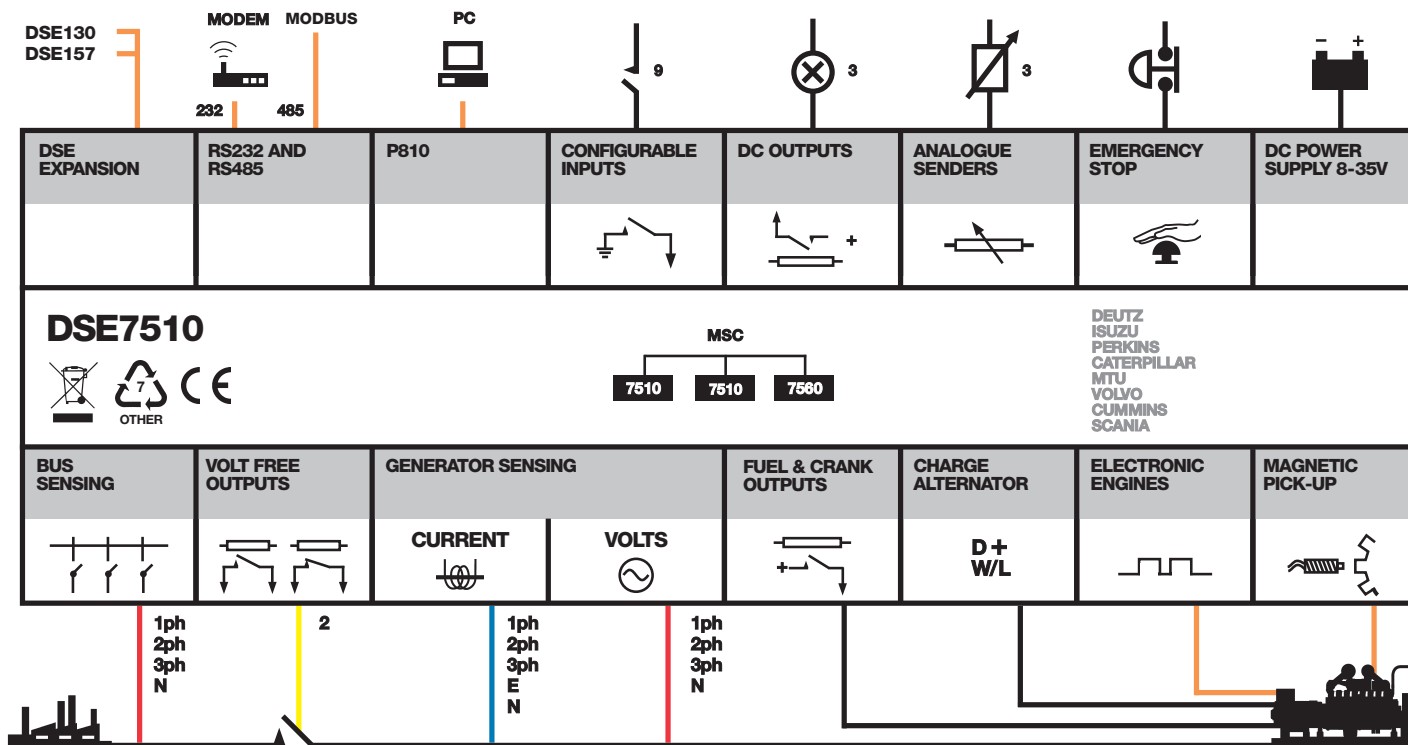

10 TYPICAL WIRING DIAGRAMS

10.1 3 PHASE 4 WIRE SYSTEM WITH RESTRICTED EARTH FAULT

NOTE:- Earthing the neutral conductor 'before' the neutral CT allows the module to read earth faults 'after' the CT only (Restricted to load / downstream of the CT)
 Earthing the neutral conductor 'after' the neutral CT allows the module to read earth faults 'before' the CT only (Restricted to generator / upstream of the CT)

