


DSE8610

AUTO START LOAD SHARE MODULE

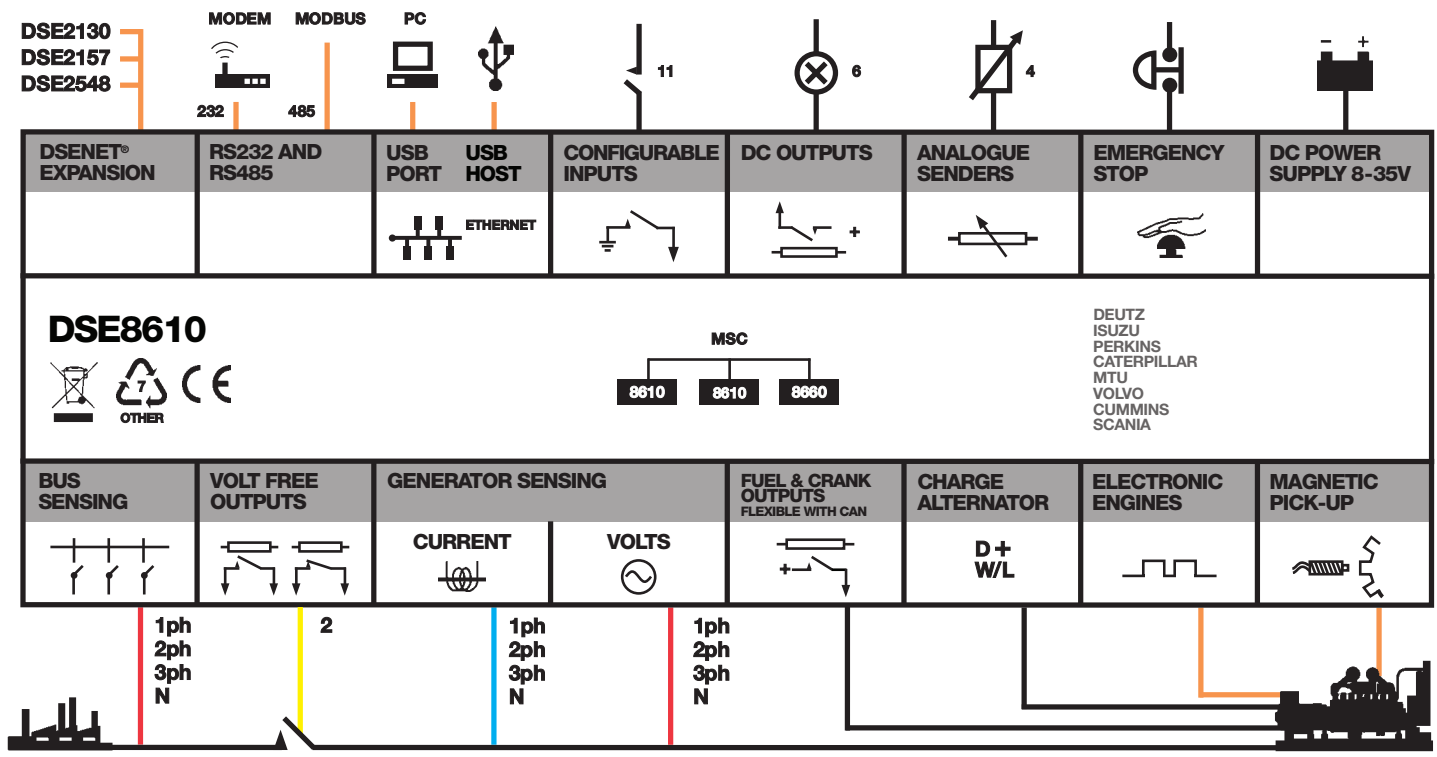

4.2.1 3 PHASE, 4 WIRE WITH RESTRICTED EARTH FAULT PROTECTION

NOTE: - Earthing the neutral conductor 'before' the neutral CT allows the module to read earth faults 'after' the CT only (Restricted to load / downstream of the CT)
 Earthing the neutral conductor 'after' the neutral CT allows the module to read earth faults 'before' the CT only (Restricted to generator / upstream of the CT)

