


DSE8660

AUTO TRANSFER SWITCH & MAINS CONTROL MODULE

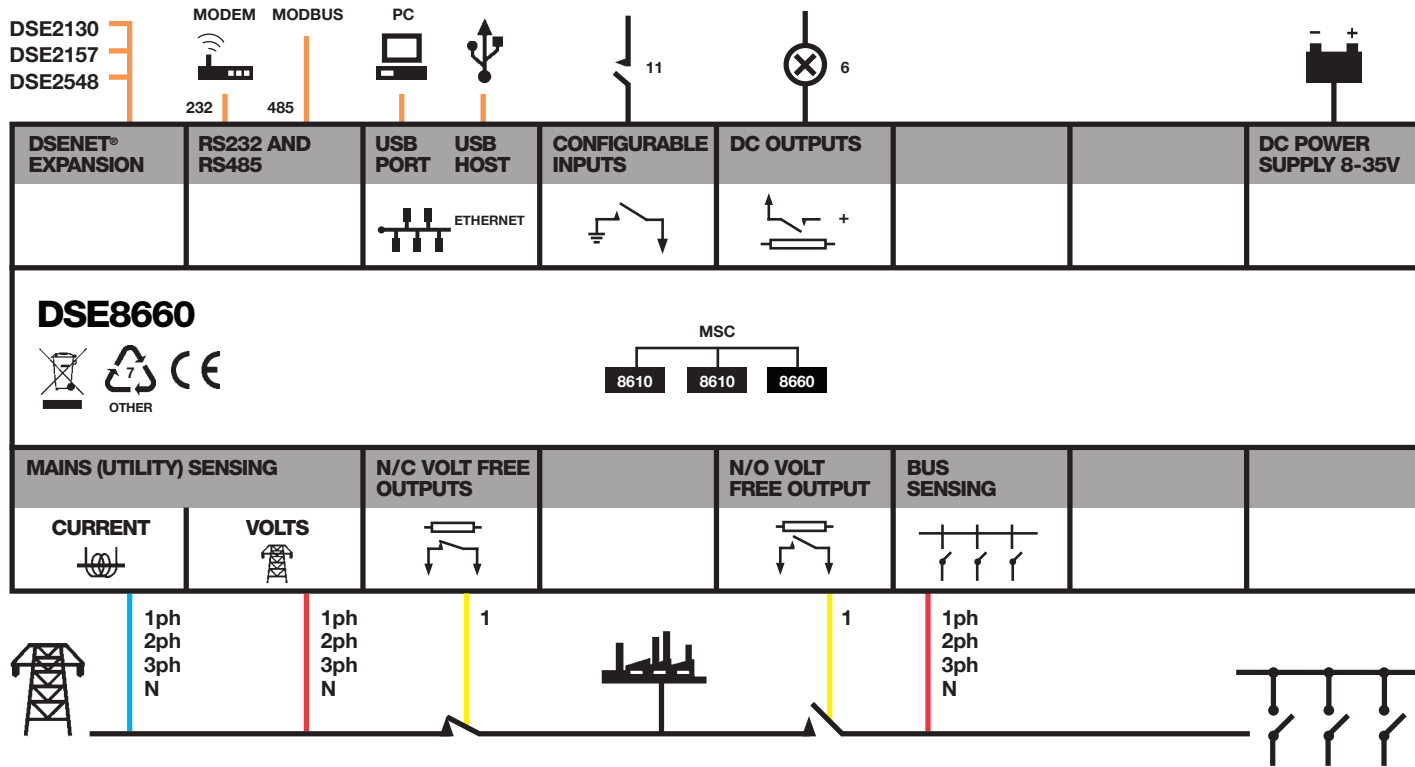

Installation

4.2.1 3 PHASE, 4 WIRE

