
# **DSEEXTRA® EXPANSION**

# **DSE545 & DSE548**

LED EXPANSION CONTROL MODULES



**DSE545** 

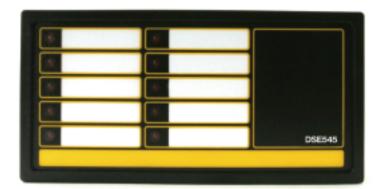



The DSE545 and DSE548 are LED expansion modules for the DSE52xx, DSE53xx and the **DSEPower® Series.** 

The modules have been designed to display a maximum of eight local or remote (max 50 metres) individual LED indications.

The DSE545 is presented in a horizontal enclosure and the DSE548 is presented in a vertical enclosure.

# **FEATURES**

- Eight configurable LEDs
- Works up to 50 meters from the host module
- Two modules can be linked together to provide 16 LED indicators
- Interconnecting FCC 68 cable for quick installation

# **OPERATION**

The LED's are configured using the host module and the appropriate PC software interface.

The LED's can be configured to be either:

- · Extinguish on command
- Light on command

An additional LED indicates that a DC power supply is being received. There is also a flashing 'Link Lost' LED fitted to indicate any communication problems with the host module. When using two expansion modules together each module should be identified as either 'A' or 'B'. This is done by positioning the selector switch on the rear of each module. **REQUEST A QUOTE** 

# **SPECIFICATION**

#### DC SUPPLY

Powered from the plant battery or from a low voltage supply between 8V and 35V continuous. It is able to survive 0V for 50ms during cranking, providing supply was at least 10V before dropout and recovers to 5V. This is achieved without the need for internal batteries.

#### MAXIMUM OPERATING CURRENT

20mA @ 12V. 26mA @ 24V

# MAXIMUM STANDBY CURRENT

107mA @ 12V. 113mA @ 24V

#### A OR B MODE SELECTOR

Recessed Jumper Selector on rear

#### **DSE545 DIMENSIONS**

72mm x 144mm x 59mm DIN rail mounted housina 2.8" x 5.7" x 2.3"

#### **DSE548 DIMENSIONS**

144mm x 72mm x 59mm DIN rail mounted housing 5.7" x 2.8" x 2.3"

# DSE545 CUT OUT

68mm x 138.5mm 2.7" x 5.5"

# DSE548 CUT OUT

138.5mm x 68mm 5.5" x 2.7'

# INDICATIONS

Link Lost (to controller) LED Flashing 8 Configurable LED's

# CONFIGURATION

The module will automatically respond to signals from the host module. The module must be configured via the host module and a PC. The Expansion LED's are numbered from 1 to 8 and appear on the output configuration menu.

# ENVIRONMENTAL TESTING STANDARDS

# **ELECTRO MAGNETIC CAPABILITY (EMC)**

BS EN 61000-6-4 EMC Generic Emission Standard for the Industrial Environment BS FN 61000-6-2 EMC Generic Immunity Standard for the Industrial Environment

#### **ELECTRICAL SAFETY** BS EN 60950

Safety of Information Technology Equipment including Electrical Business Equipment

# TEMPERATURE

BS EN 60068-2-2 Test Ab to 70°C Test Ab to -30°C

# VIBRATION

BS EN 60068-2-6 Ten sweeps in each of the three major axes 5Hz to 8Hz @ +/- 7.5mm

# HUMIDITY

BS EN 60068-2-30 Test Db 95% RH @ 55°C for 12 hours

# SHOCK

BS EN 60068-2-27 Three shocks in each of three major axes 15gn in 11mS

parts@genpowerusa.com

**DEEP SEA ELECTRONICS PLC** 

Highfield House Hunmanby Industrial Estate Hunmanby, North Yorkshire YO14 0PH England

Registered in England & Wales No.01319649

**DEEP SEA ELECTRONICS INC** 

3230 Williams Avenue Rockford IL 61101-2668 USA

**TELEPHONE** 

+44 (0)1723 890099

**FACSIMILE** 

+44 (0)1723 893303

VAT No.316923457

**TELEPHONE** 

+1 (815) 316 8706

**FACSIMILE** 

+1 (815) 316 8708

**EMAIL** 

sales@deepseaplc.com

WEBSITE

www.deepseaplc.com

**EMAIL** 

sales@deepseausa.com

WEBSITE

www.deepseausa.com



**RELATED MATERIALS** 

52/53xx Software Manual

DSE5210 & DSE 5220 data sheet DSE5210 manual DSE5220 manual DSE5310 & 5320 data sheet DSE5310 manual DSE5320 manual

**PART NO'S** 

055-037 053-023 057-016 055-038 057-013 057-014 057-006 TITLE

DSE5510 data sheet DSE5510 manual DSE5520 data sheet DSE5520 manual DSE5560 data sheet DSE5560 manual 55xx Software Manual PART NO'S

055-039 057-015 055-040 057-016 055-041 057-017 057-007















